

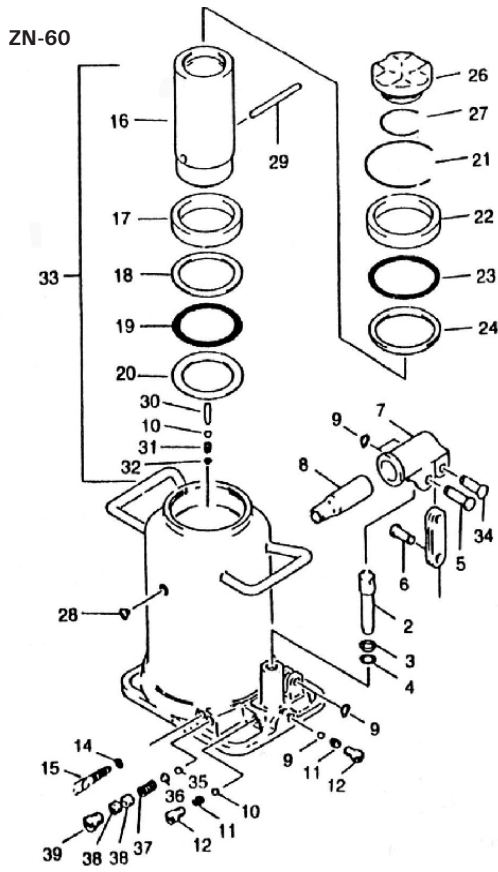


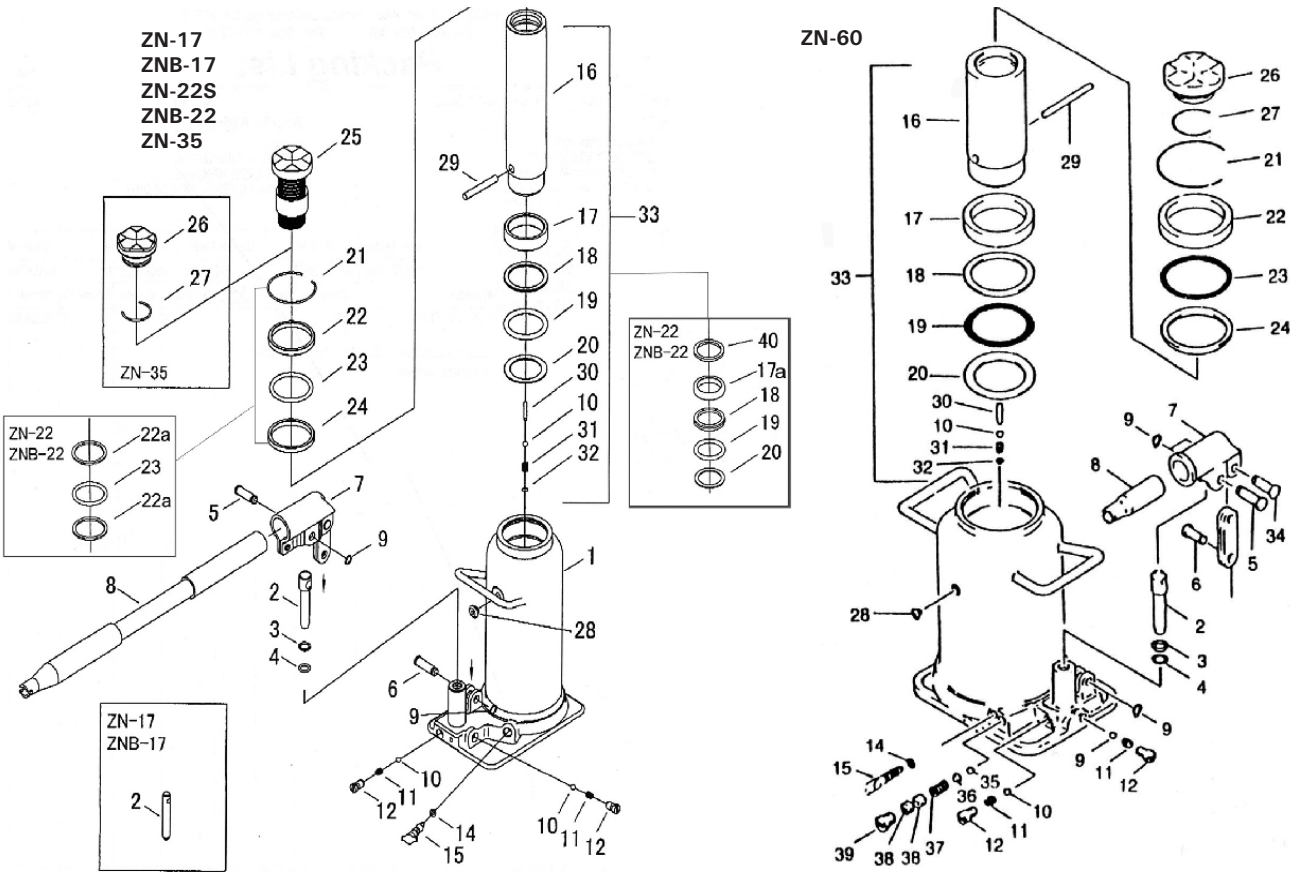

# ZN & ZNB Series Parts Breakdown

Toll Free: 1-800-579-8088 Web: [www.zinko.com](http://www.zinko.com)

REV 121008  
Page 1 of 2

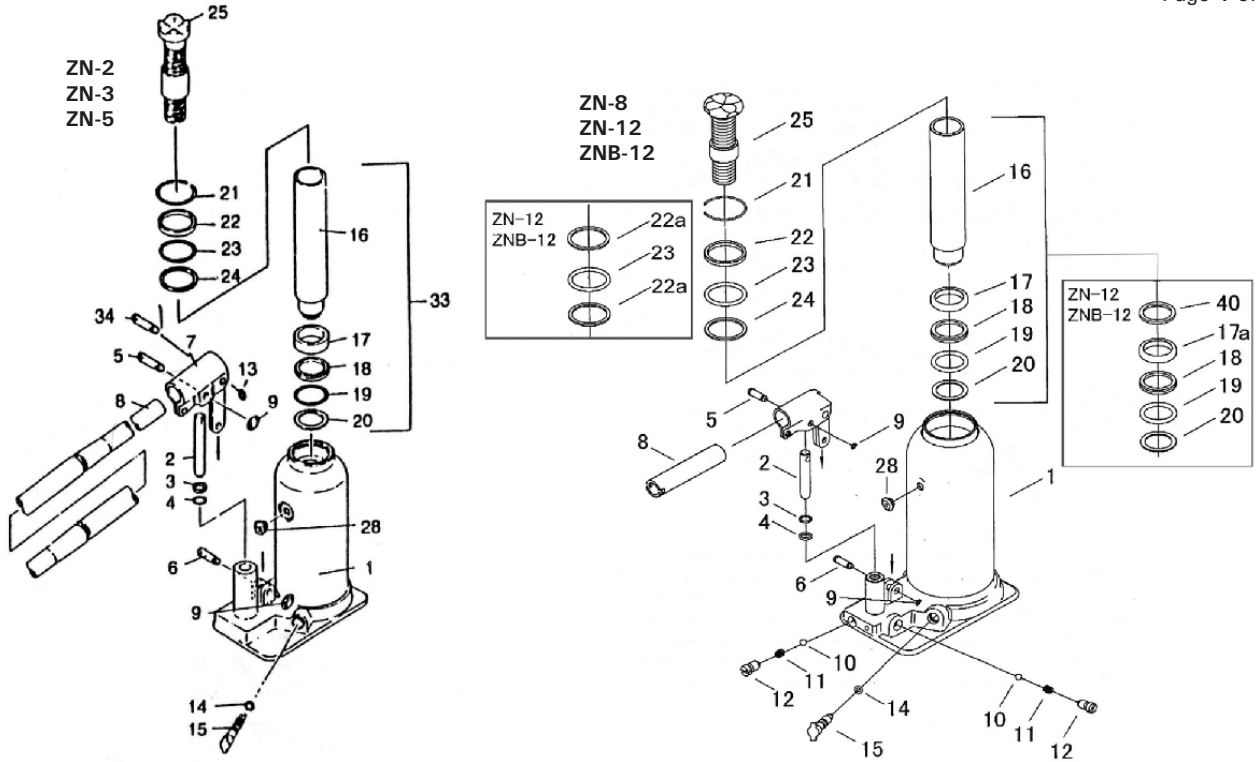



# ZN & ZNB Series Parts List

Toll Free: 1-800-579-8088 Web: [www.zinko.com](http://www.zinko.com)

REV 121008  
Page 2 of 2

MODEL	ZN-2 (2 Ton)	ZN-3 (3 Ton)	ZN-5 (5 Ton)	ZN-8 (8 Ton)	ZN-12 (12 Ton)	ZNB-12 (12 Ton) LOW	ZN-17 (17 Ton)	ZNB-17 (17 Ton) LOW	ZN-22S (22 Ton)	ZNB-22 (22 Ton) LOW	ZN-35 (35 Ton)	ZN-60 (60 Ton)
<b># Parts Description</b>												
1) Body Assy	N/A											
2) Pump Plunger	ZN002-2			ZN008-2				ZN022-2		ZN060-2		
3) Pump Backup Ring	ZN002-3			ZN008-3						ZN060-3		
4) Pump Packing	ZN002-4			ZN008-4						ZN060-4		
5) Pump Plunger Pin	ZN002-5			ZN008-5				ZN022-5		ZN035-5	ZN060-5	
6) Pump Stay Pin	ZN002-6			ZN008-6				ZN022-6				ZN060-6
7) Handle Socket Assy	ZN002-7			ZN008-7				ZN022-7		ZN035-7	ZN060-7	
8) Handle	ZN002-8		ZN005-8	ZN008-8				ZN022-8				ZN060-8
9) Snap Ring/Push Nut	ZN002-9			ZN008-9				ZN022-9				ZN060-9
10) Valve Ball	ZN002-10			ZN008-10								
11) Valve Spring	N/A			ZN008-11								
12) Valve Plug	N/A			ZN008-12								
13) Push Nut	ZN002-13			N/A								
14) Release Packing	ZN002-14											
15) Release Assy	ZN002-15											
16) Ram	ZN002-16	ZN03-16	ZN005-16	ZN008-16	ZN012-16	ZNB12-16	ZN017-16	ZNB17-16	ZN022-16	ZNB22-16	ZN035-16	ZN060-16
17) Ram Packing Seat	ZN002-17	ZN03-17	ZN005-17	ZN008-17	ZN012-17a		ZN017-17	ZNB17-17	ZN022-17a		ZN035-17	ZN060-17
18) Ram Backup Ring	ZN002-18	ZN03-18	ZN005-18	ZN008-18	ZN012-18		ZN017-18		ZN022-18		ZN035-18	ZN060-18
19) Ram Packing	ZN002-19	ZN03-19	ZN005-19	ZN008-19	ZN012-19		ZN017-19		ZN022-19		ZN035-19	ZN060-19
20) Ram Packing Stopper	ZN002-20	ZN03-20	ZN005-20	ZN008-20	ZN012-20		ZN017-20		ZN022-20		ZN035-20	ZN060-20
21) Snap Ring	ZN002-21	ZN03-21	ZN005-21	ZN008-21	ZN012-21		ZN017-21		ZN022-21		ZN035-21	ZN060-21
22) Stuffing Ring	ZN002-22	ZN03-22	ZN005-22	ZN008-22	ZN012-22a		ZN017-22	ZNB17-22	ZN022-22a		ZN035-22	ZN060-22
23) Cylinder Packing	ZN002-23	ZN03-23	ZN005-23	ZN008-23	ZN012-23		ZN017-23		ZN022-23		ZN035-23	ZN060-23
24) Stopper Ring	ZN002-24	ZN03-24	ZN005-24	ZN008-24	ZN012-22a		ZN017-22	ZNB17-22	ZN022-22a		ZN035-22	ZN060-24
25) Adjusting Screw Assy	ZN002-25	ZN03-25	ZN005-25	ZN008-25	ZN012-25	ZNB12-25	ZN017-25	ZNB17-25	ZN22-25	ZNB22-25	N/A	
26) Supporting Plate	N/A											
27) Snap Ring	N/A											
28) Oil Plug	ZN002-28											
29) Horizontal Pin	N/A						ZN017-29		ZN022-29		ZN035-29	ZN060-29
30) Vertical Pin	N/A						ZN017-30		ZN022-30	ZNB22-30	ZN035-30	ZN060-30
31) Ram Spring	N/A						ZN017-31					
32) Ram Spring Stopper	N/A						ZN017-32					
33) Ram Assy	ZN002-33	ZN03-33	ZN005-33	ZN008-33	ZN012-33	ZNB12-33	ZN017-33	ZNB17-33	ZN022-33	ZNB22-33	ZN035-33	ZN060-33
34) Pin, Handle Socket	ZN002-34			N/A								ZN060-34
35) Safety Valve Ball	N/A											
36) Safety Valve Ball Seat	N/A											
37) Safety Valve Spring	N/A											
38) Adj. Screw Safety Valve	N/A											
39) Safety Valve Plug	N/A											
40) Ring	N/A				ZN012-40		N/A		ZN022-40		N/A	